


How to License a FastCAM[®] product Online

1. After installing the application onto the computer, run the application by double-clicking on the icon on the Windows desktop.

You will then see the introduction screen:-

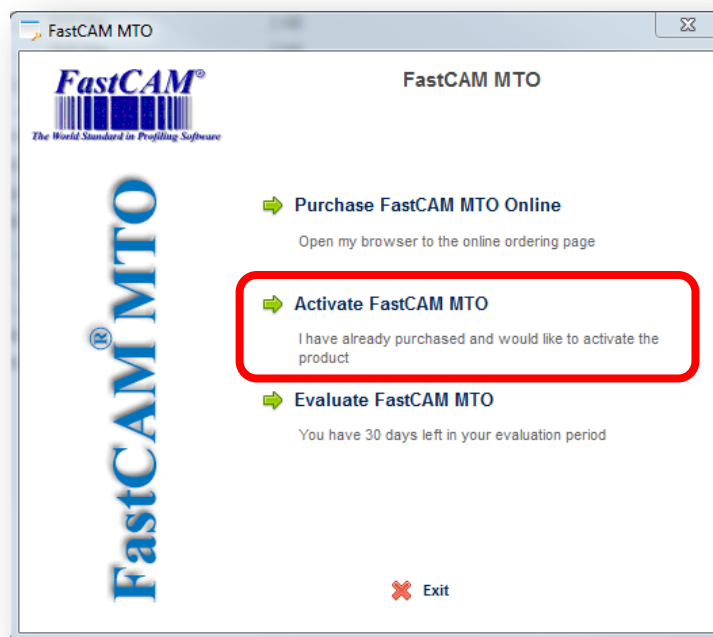

NOTE: Depending on the product, this screen may appear different as not all our products are issued as Trials, so the “Evaluate.....” button may not appear.



2. Click on the “**Activate**” button.

The screen will then appear as below giving you the option to either Activate Online or Activate Manually.


We **recommend** that if you have an internet connection on that computer that you use the Activate Online method.

3. Click the “**Activate....Online**” button.




4. Now type in your **License ID** and your **Password** and click the **Continue** button.

If you purchased the product online then the Licence ID and Password will be sent to you in the emailed Invoice.

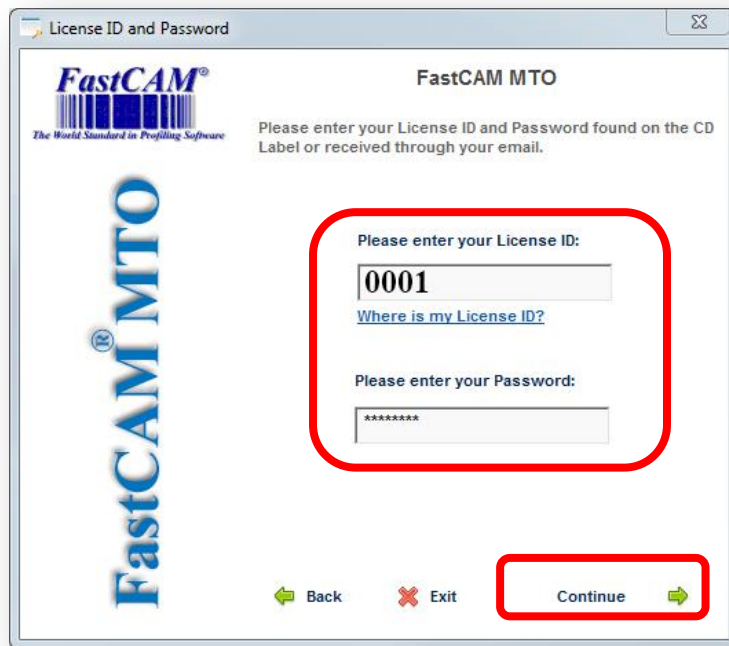

5. If the Activation was successful you will then see this screen. You can then press the **Continue** button for the final time and the program will then run.

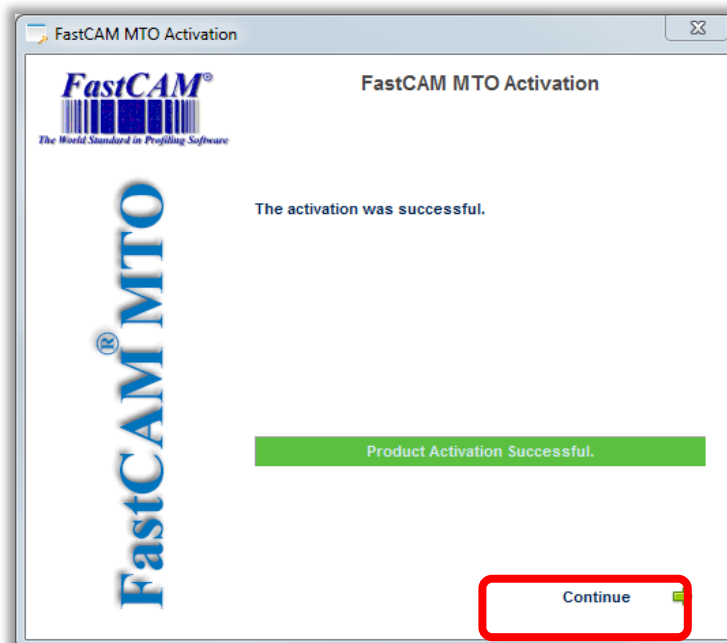

If for any reason the Activation fails, the screen will show an Error Code. Please contact FastCAM support with this error code to resolve the problem.